THE **CAPRI** 1530





FARMHOUSE




MODERN



BUNGALOW




COTTAGE

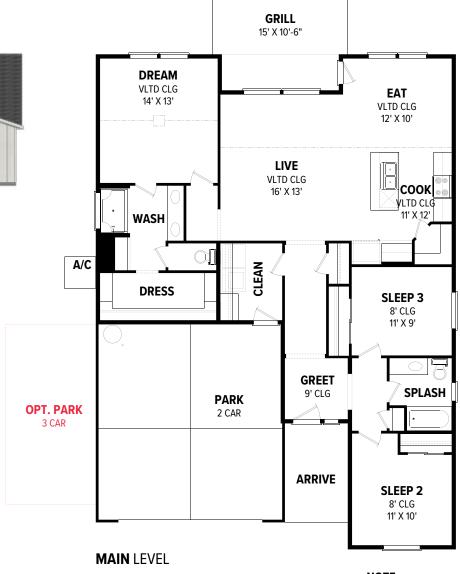

NOTE: FURNACE **INSTALLED IN ATTIC**

THE **CAPRI** 1530

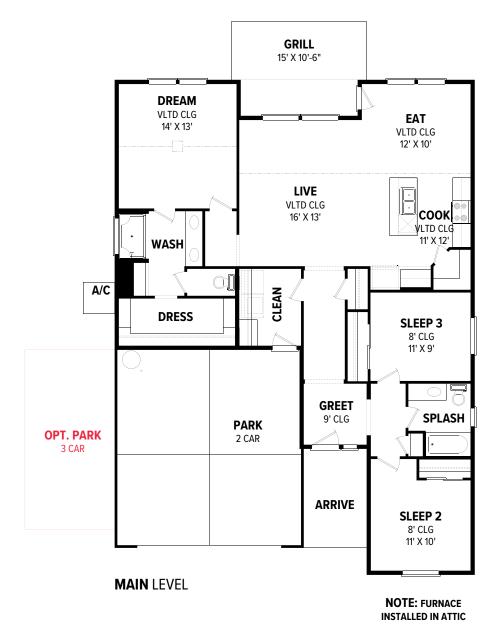

FLOOR PLANS



COTTAGE



BUNGALOW



MODERN



FARMHOUSE