## THE **CAPRI** 1530





**FARMHOUSE** 




**MODERN** 



**BUNGALOW** 



COTTAGE

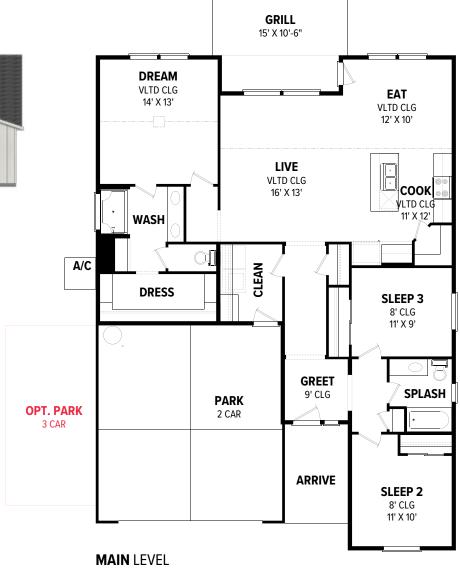

**NOTE:** FURNACE **INSTALLED IN ATTIC**